

## INSTRUCTIONS MANUAL

### CUBO LED

It is important to read the instruction manual before using the product. Charge the battery before the first use and every 2 months for complete storage of the product!



### TECHNICAL DATA:

- Name: CUBE LED
- Material: PE (polyethylene)
- Size: 40 cm×40 cm×41 cm
- Control: Remote Control Battery (waterproof)
- Power supply: 100–240 V,50.60Hz, (OUTPUT: +4.8 V 0.9 A)
- Battery: Lead-acid batteries (4V.6000mAh)
- Charge time: 5–6 hours (8–10 hours of run time)
- LED Life: >50,000 hours

### SAFETY INSTRUCTIONS

Read instructions manual carefully before using this product

#### NOTE! Load product only in dry indoor rooms!

- Watch out, that there is no humidity at the charging socket and the charger. Ensure that there is no contact with dirt or metal objects (such as keys).
- Use the battery charger only for recharging the product. Check whether the voltage indicated on the device complies with the mains voltage.
- The use of the product immediately stops if it emits smoke, take a strange smell, or any other unusual behavior.
- The product has to be used only if it is installed correctly and free from defects.
- Do not drop the product to protect from bumps and knocks.
- Do not pull the cord.
- Improper repairs or changes can endanger the user.
- Check the product regularly for any defects. If it is damaged, don't use it furthermore.


### CARE INSTRUCTIONS

Clean only with a damp, soft towel. Never use aggressive solvents or alcohol-based cleaners.

### FIRST STEPS:

- Remove the protection (DC Input)
- After loading, close the protection (DC input) again, to prevent water
- The red button turns on the unit, the last selected mode is active again
- Press the green button to stop the program onto start again
- To turn off simply press the red button

### REMOTE CONTROL:

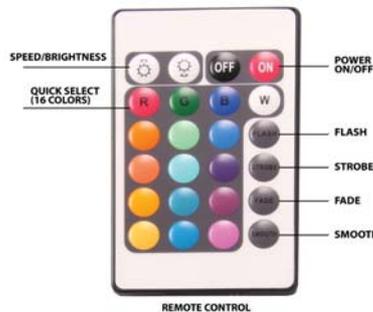

#### To activate, remove the battery separator film.

- Power-On („red“)
- Power-OFF: („black“)
- Brightness Control: Brightness
- Speed Control: „Flash“, „Strobe“, „Fade“ or „Smooth mode“
- Flash mode: change of 7 colors
- Strobe mode flash (white)
- Fade mode: flashing 7 colors
- Smooth mode: slow change of the full color spectrum
- Colour buttons: direct choice of colors

**NOTE: The lithium battery (CR2025 3V) is not waterproof and not suitable for children.**

### SAFETY INSTRUCTIONS – BATTERY

**The built-in battery may be replaced only by qualified personnel. Use only the same type.**

- Use only the supplied battery charger to recharge the battery.
- Never disassemble the battery, heat or undergo changes.
- If liquid should leak, avoid skin contact. If liquid is spilled on clothing or skin, immediately use water for cleaning. In case of problems, contact a doctor.

### CHARGE THE BATTERY

First plug the charger into the socket of the product, then into the outlet.

**The following information will help to achieve a longer battery life:**

- Before use. fully charge the battery.
- NOT FULLY DISCHARGE THE BATTERY! After max. 5–6 hour recharge the battery, because it can be damaged!
- If the product is not in use for a long time, turn off the standby mode (switch on the product) and fully charge the battery. Below 25 °C, the product can be stored for 2 months.
- If the battery will be exhausted quickly even after the charging, it has reached the end of its lifetime and should be replaced.

### DISTRIBUTION

gastro  
nabytek 24

### SAFETY INSTRUCTIONS CHARGER:

#### Attention!

The unit is supplied with dangerous voltage. So take itself no interference from the device. Improper procedure may cause an electric shock. Unauthorized unsealing will void the warranty.

- Check the voltage indicated on the device corresponds with the mains voltage.
- Use the device only for charging the LED product.
- Use the charger only indoor and protect it from drops and splashes, humidity and heat.
- Make sure that the charger is connected and the connector isn't in touch with din or metal objects (such as keys).

#### Attention!

Stop the charging process only, if the battery is fully loaded or the charger is not in use.

**Do not use the device or pull of the power plug from the socket:**

- If visible damage are available on the device or network cables
- After a plunge or if there is suspicion of a similar defect
- If any problem appears

**In addition, the following instructions must be followed:**

- A damaged power cord must be replaced by the manufacturer or by an authorized service center.
- Never pull the plug on the cord from the outlet, always hold the plug.
- If the unit is misused, improperly connected or not repaired properly, the manufacturer is not liable for any resulting property damage or personal injuries and no guarantee can be given for the device

### TROUBLESHOOTING

**The unit does not work**

**The battery is discharged**

Solution: The product automatically turns off when the battery is exhausted by continuous operation. It comes back when the battery recharged. The charging process is finished when the LED is green

**Process is halted**

Solution: Insert the charger plug into the charging jack on the right LED product!

### ENVIRONMENT / WASTE MANAGEMENT

Equipment and packaging material are made of recyclable material. The separate, environmentally sound disposal of residual material promotes the recycling of valuable materials. Your old appliance packaging give to proper disposal.

Batteries and accumulators do not belong in the trash! In the interest of environment, protection you are committed to the current Battery directive. Old and return used batteries and accumulators have to be returned to a authorized location. Disposal information, contact the local council.

### WARRANTY

The seller provides for proper materials and processing guarantee production within 12 months from date of purchase to the following conditions. The warranty is void if the buyer or operation, alteration or incorrect positioning, incorrect connection or by using false lighting, as well force majeure or other factors. These factors are not covered by warranty. We reserve the right to repair the defective parts with complaints or to substitute or replace the unit. Replaced pans become our property. Further claims are not under the guarantee. The warranty claim is proven by the purchaser by presentation of proof purchase.

In case of warranty, the product will only be withdrawn in undamaged original packaging.